V:1807

HOTT®

English

中文

日本語

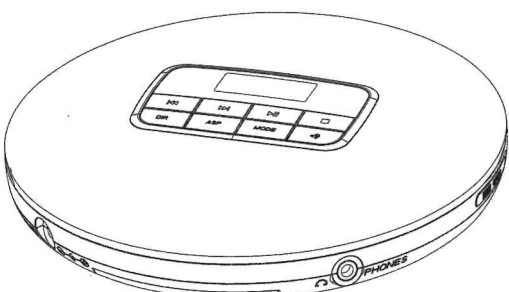

CD511 USER Manual

SAFETY AND CLEANING

Safety

■ This device is designed for the play-back of audio signals.Any other use is expressly prohibited.

■ Protect the device from moisture (water drops or splashes), direct sunlight and heat.

■ Do not place any vessels such as vases on the device.

■ Only use the device in a moderate climate.

■ Do not place any objects such as burning candles on the device.

■ Please note when deciding where to put the device that furniture surfaces are covered by various types of lacquer and plastic, most of which contain chemical additives. These may cause corrosion to the feet of the device, thus resulting in stains on the surface of the furniture which can be difficult or impossible to remove.

■ The device contains self-lubricating bearings, which must not be oiled or greased.

■ Condensation may form on the lens if the device is taken into a warm room from the cold. This prevents if from playing a Disc.

■ Never touch the lens on the device. Always keep the disc compartment closed to prevent dust from collecting on the lens.

■ Only operate the device with the power supply provided.

■ Never open the device casing. No warranty claims are accepted for damage resulting from improper handling.

■Note, prolonged listening at loud volumes with the earphones can damage your hearing.

Cleaning

■ If the device is unable to scan discs perfectly, use a standard, commercially available cleaning to clean the laser optics. Other cleaning methods may damage the laser optics.

■ Clean the device with a clean, damp leather cloth. Do not use any cleaning agents.

■ WARNING: The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

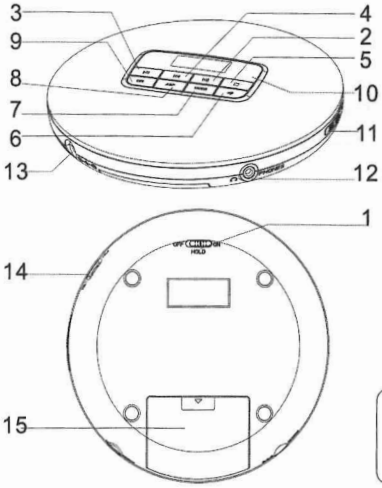
3
4
9
2
5
8
10
7
6
11
13
12
1
14
15


ASP CD
BBS
04 01:24

Model No.	Mark	Descriptions
1	**HOLD**	Lock button switch.(**Not power switch button**)
2	▶II	Starts and pauses playback. (Make sure the "**HOLD**" button turned at "**OFF**" position before powering on)
3	I◀◀	Press once to replay the current song ,Short press twice to select previous song ,Long Press to fast backward
4	▶▶I	Short press to select the next song; Long press to fast forward
5	■	Press once, ends playback; press twice switches the device off
6		Selects sound effects
7	**MODE**	Selects several playback options
8	**ASP**	Switches the anti-shock system on/off **- CD: 40 seconds,** **- MP3 disk: 120 seconds.**
9	**DIR**	Select the next album, only for MP3 format
10	**LCD**	LCD Display
11	**OPEN**	Opens the CD lid
12	**PHONES**	Headphone jack for connecting a headphone set with a jack plug(Ø3.5mm)
13	**DC IN 4.5V**	Socket for the mains adapter.
14	**VOL- /VOL+**	Adjusts the volume
15	**BATTERY**	Battery compartment

OVERVIEW

The display

04 Displays the number of song or the current track (CD-DA).

01:24 Displays the total playing time or the elapsed playing time of the song

CD A CD-DA has been inserted.

MP3 An MP3 disc has been inserted.

ASP The anti-shock system has been activated.

BBS POP JAZZ ROCK CLASSIC Shows the selected sound effect.

↻1 A file or a track is repeated.

↻ALL All tracks on the MP3 CD or all files on the CD-DA are replayed.

↻**DIR** All the files of the current album are played back repeatedly(only MP3).

INTRO The first 10 seconds of each title or file are played.

SHUF All files or tracks are played back in random order.

Low battery display

POWER SUPPLY

Mains operation (with mains adapter)

1. Plug the mains adapter cable into the>> DC IN 4.5V ⊖-◉-⊕<<socket.

2. Plug the mains adapter into the mains socket.

Notes:

- Check if the mains voltage on the mains adapter type plate corresponds to your local mains supply.
- The only way to disconnect the device from the mains supply is to unplug the adapter.
- unplug the mains adapter from the socket when you are not using the device.

Caution:

- Only operate the device with the power supply provided.

Battery operation

1. Pull out the mains adapter cable.
2. Open the lid of the battery compartment on the bottom of the device.
3. Insert two batteries (2x1.5V, LR06 /AM3/AA) in the battery compartment observing the polarity.
4. Close the battery compartment carefully.

Notes:

- The device display tells you about the state of the batteries, If>><< flashes in the display, batteries power is running out.
- The batteries are switched off during mains operation.
- Remove the batteries when you know that the device will not be used for a long period of time .The manufacturer accepts no liability for damage resulting from leaking batteries.

Environmental note:

- Batteries, including those which contain no heavy metal, should not be disposed of with house hold waste. Please dispose of used batteries in an environmentally responsible manner. Find out about the legal regulations which apply in your area.

GENERAL INFORMATION

Switching on / off the key-lock

1. Switch on the key-lock by moving the slider >> **HOLD** << to the position >>**ON**<<.

   --The buttons on the device are locked.(Except **VOL-** or **VOL+**)
2. Switch off the key-lock by moving the slider >> **HOLD** << to the position >>**OFF**<<.

Connecting earphones

Connect the earphones to the >>**PHONES** << socket （⌀3.5mm）.

Adjusting the volume

Adjust the volume with >>VOL- or VOL+<<.

Notes:

- Excessive volume can be hazardous to yourself and other road users. Listen at a volume which still allows you to hear outside noises clearly, for instance horns, emergency vehicles and police cars.
- The output of the device guarantees the best possible sound at medium volume. Prolonged listening at loud volumes can damage your hearing.

Sound effects

Select the sound effects by short pressing>><<.

During playback you can choose between the following sound effects: Flat (no display), BBS, Pop, Jazz, Rock, Classic.

BASIC FUNCTIONS

Inserting a disc

1. Press the >>OPEN<< sliding switch to the right and open the CD lid.
2. Insert the disc with the label facing upwards and gently push the centre of the disc to latch it into place.
3. Close the CD compartment.

Removing the disc

1. Press >> ■ <<before you open the CD compartment.
2. Press the >>OPEN<< sliding switch to the right and open the CD lid.
3. Remove the disc.
4. Close the CD compartment.

CD playback /pause

The device automatically recognizes the type of disc inserted (CD-DA, CD-R,

CD-RW, MP3 disc).

1. Press>>▶ II<< to switch on the device. (Make sure the "**HOLD**" button turned at "OFF").

-- Display: briefly displays the total number of files, albums or tracks and then the number of the first file or track and the elapsed playing time.

2. Press>>▶ II<< to switch to pause when playback

-- Display: the playing time of the file or track flashes.

3. Continue playback with >>▶ II<<.

4. Press>> ■ << to end playback.

5. To switch off the device. press >> ■ <<again.

Notes:

- Playback stops automatically if the CD compartment is opened or if the batteries run out.
- The device switched off automatically after the end of playback if you do not press a button within 30 seconds.

Resume function

1. End playback by pressing>> ■ << twice.

-- When playback is resumed, it starts from the position at which it was ended.

2. To start playback form the first track, press>> ■ << once and start playback with >>▶ II<<.

Searching for a passage within a file or track

During playback, press>>|◀◀ << or >>▶▶| << and hold it down until you find the passage you want to hear.

-- During the search the volume is reduced.

Selecting another file or track

During playback, keep pressing >>|◀◀ << or >>▶▶| << briefly until you see the number of the file or track you want in the display.

-- Playback of the selected track starts automatically.

Selecting albums (only MP3)

During playback, press>>**DIR**<< repeatedly until the number of the desired album appears in the display.

-- Playback begins with the first file of the selected album.

ADDITIONAL FUNCTIONS

Repeating a file or track

During play back, press >>**MODE**<< once.

-- Display: >>↻ **1**<<, The current file or track will be played repeatedly

Repeating all files or titles

During playback, press>>**MODE**<< until >>↻ **ALL**<< appears in the display.

-- All files or tracks are played back repeatedly.

Repeating all the files on an album (only MP3)

During playback, press>>**MODE**<< until >>↻ **DIR**<< appears in the display.

-- All the files in an album are repeated.

Playing the introductions of tracks or files on the disc (Intro)

1. During playback, press>>**MODE**<< so often until >>**INTRO**<< flashed in the display.
2. To start this function, press>>▶ **II**<<.

-- The first 10 seconds of each track are played.

Playing back files or tracks in random order (Shuffle)

During playback, press>>**MODE**<< so often until >>**SHUF**<< flashes in the display.

-- All of the tracks on the disc are played back in random order.

Digital anti-shock system (DAS)

press >>**ASP**<< to switch the anti-shock system on or off.

The anti-shock system reads the data on the CD-DA 40 seconds in advance (or 120 seconds in MP3 mode).You cannot switch off the antishock system in MP3 mode.

FAQ & TROUBLESHOOTING

Problem 1: Can you plug external speaker into it?

Answers: You can connect the player to your speaker via the jack to play music.

Problem 2: Why it does not work after you press the start button (⏯)?

Answers: please check the back side where printed "HOLD", if this button is at the "ON" position, it means that all buttons are locked. What you need to do is just push the button to the "OFF" end, then you go back to check the start button if it work.

Problem 3: What types of disc is supported with this CD player?

Answers: Portable Compact CD Player designed to play CD, CD-R, CD-RW and MP3 Disc; DVD or other types of Discs will not be supported. Support playing formats: CD-DA, MP3, and WMA.

Problem 4: CD is rotating, but no sound.

Answers: Firstly, please check the volume and adjust the volume. Secondly, if it still does not work, please check the format of your CD. As our CD player only supports CD, MP3, CD - R, CD – RW

Problem 5: Your CD player does not work suddenly

Answers: A, the batteries might be power off. B, your disc is badly or too old for the CD player to read.

Problem 6: Noisy and screaming when it plays, or it automatically skips part of the contents of CD

Answers: A, maybe using time of the disk is too long, so the disk is not smooth

B. If there is a "Jiji" sound inside the earphone, it may be caused by scratching the disc

Problem 7 : Can this be used in a car and play through the cars speakers?

Answers: Yes, you can connect CD player with a speaker by the 3.5mm AUX cable to listen

Problem 8: Does this player have a memory feature?

Answers: It has a memory feature if it suddenly shut off, When playback is resumed, it starts from the position at which it was ended

Problem 9: Can i use this without earphones?

Answers: Not unless you plug speakers into the earphone jack, because itself has no external speaker.